



DIGITAL TELEMETRY

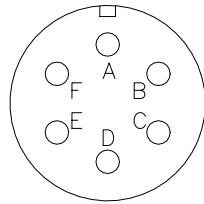

PROCESSOR CONNECTOR
MS3106A-14S-6P (PIN VIEW)

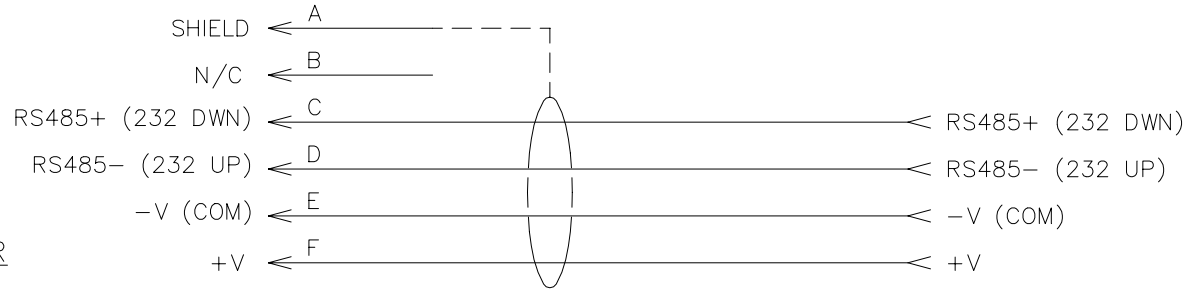

NOTE:

IF THE HEAD IS NOT POWERED FROM THE PROCESSOR, CONNECT THE +/-V TERMINALS OF THE HEAD TO A SUITABLE EXTERNAL POWER SUPPLY AND DISCONNECT THE F TERMINAL ON THE PROCESSOR CONNECTOR (-V HAS TO CONNECT TO THE EXTERNAL SUPPLY AS WELL AS TERMINAL E OF THE PROCESSOR CONNECTOR).

ZONE	ISS	DESCRIPTION	DATE	APPROVED
REVISIONS				

<p><u>PROPRIETARY NOTICE</u> THIS DOCUMENT CONTAINS INFORMATION WHICH IS THE SOLE PROPERTY OF KONGSBERG MESOTECH Ltd. AND IS RECEIVED IN CONFIDENCE. ITS CONTENTS MAY NOT BE DISCLOSED OR REPRODUCED IN ANY WAY WITHOUT THE WRITTEN CONSENT OF KONGSBERG MESOTECH Ltd.</p>	<p>APPROVALS</p>		<p>DATE</p>		<p>Kongsberg Mesotech Ltd.</p>				
	<p>DRAWN J.BANSER</p>		<p>11MAY00</p>						
	<p>CHECKED</p>		<p>ENGR</p>		<p>PROCESSOR - HEAD INTERCONNECTION RS485/232 DIGITAL TELEMETRY</p>				
	<p>ISSUED</p>		<p>NEXT ASSY</p>						
	<p>ZONE</p>		<p>MODEL</p>		<p>A</p>	<p>1C965</p>	<p>MD</p>	<p>436-00001201</p>	<p>1.0</p>



SCALE: - | W.O. NO. | SHEET 1 OF 1